

# 9500 Series GAS SHOCK ABSORBERS



- High pressure gas monotube eliminates foaming and lag time for instant control
- Brushed stainless appearance with top clear coat for long term performance
- Includes urethane bushings for increased shock performance
- Mono-Tube design provides excellent heat dissipation
- Robotically welded ends eliminates breakage
- Large 46mm piston for consistent pumping force
- Roll closed ends for leak proof construction
- All weather convoluted boot (available separately)



Correct Application Valving Technology is based on extensive shock dyno and ride control research offering the most application specific part numbers available for on and off-road light trucks and SUV's.

This results in:

- Increased stability for improved handling
- Longer front end and tire life
- Less nose dive on severe braking
- Less squat on hard acceleration
- Smoother ride—control without harshness

## 9500 SERIES GAS SHOCK BOOT

*For cylinders over 26" Extended*

- 2" Boot diameter to properly fit the O.D. of the shock cylinder
- Long enough to not pull off during full droop
- New roll end collar design to ensure that the boot stays in place

Color	Retail (1/pkg)	Bulk
Black.....	097520	097525



*Note: Packaged boots include shock ties.*

*For cylinders under 26" Extended*

Color	Retail (1/pkg)	Bulk
Red.....	098270	098275
Blue.....	098500	098505
Black.....	098520	098525



## 9500 SERIES GAS SHOCK ABSORBER APPLICATIONS

### CHEVROLET/GMC 4WD

Model	Year	Lift	Front Shock	Rear Shock
Pickup K1500/C1500	07-08	0"	n/a	95719
Pickup K1500/C1500	07-08	6"	n/a	95759
Pickup K1500 (Non HD)	99-06	6"	95602	95759
Pickup C1500 (2WD-Non HD)	99-06	6"	95604	95759
Pickup K2500 HD & Non-HD	01-08	6"	95605	95761
Pickup C2500 HD (2WD)	01-08	6"	95605	95761
Hummer H2	03-08	6"	95605	95761
Pickup K1500 6-Lug	88-98	6"	95600	95609
Pickup K10, 20, 30	73-87	2.5"	95620	95629
Pickup K10, 20, 30	73-87	4"	95620	95639
Pickup K10, 20, 30	73-87	6-8"	95650	95639
Pickup K10, 20, 30	69-72	4"	95620	95660
Tahoe, Yukon, Suburban, Avalanche, 1500	07-08	0"	n/a	95719
Tahoe, Yukon, Suburban, Avalanche, 1500 4WD	07-08	6"	n/a	95759
Tahoe, Yukon, Suburban, Avalanche, 1500	00-06	6"	95602	95759
Suburban, Avalanche 2500	01-06	6"	95605	95761
Blazer, Jimmy K5, Suburban 10, 20	73-91	2.5"	95620	95629
Blazer, Jimmy K5, Suburban 10, 20	73-91	4"	95620	95639
Blazer, Jimmy K5, Suburban 10, 20	73-91	6-8"	95650	95639
Trailblazer	02-08	2"	n/a	95619
S-Series Blazer, Pickup, ZR2	83-05	5"	95610	95608

### CHEVROLET/GMC 4WD with OE Front Dual Shocks

Model	Year	Lift	Front Shock	Front Auxiliary	Rear Shock
Pickup K10, 20, 30	81-87	2.5"	95620	95620	95629
Pickup K10, 20, 30	81-87	4"	95620	95650	95639
Pickup K10, 20, 30	81-87	6"	95650	95650	95639
Pickup K10, 20, 30	81-87	8"	95650	95660	95639
Blazer, Jimmy K5, Suburban 10, 20	81-91	2.5"	95620	95620	95629
Blazer, Jimmy K5, Suburban 10, 20	81-91	4"	95620	95650	95639
Blazer, Jimmy K5, Suburban 10, 20	81-91	6"	95650	95650	95639
Blazer, Jimmy K5, Suburban 10, 20	81-91	8"	95650	95660	95639

*Note: The front auxiliary is the inner long shock.*

**Boots ordered separately**

# 9500 Series GAS SHOCK ABSORBERS

## DODGE 4WD

Model	Year	Lift	Front Shock	Rear Shock
Ram Pickup 1/2 Ton	06-08	0"	n/a	95719
Ram Pickup 1/2 Ton	06-08	6"	n/a	95769
Ram Pickup 1/2 Ton - Mega Cab	06-08	2-3"	95700	95759
Ram Pickup 1/2 Ton - Mega Cab	06-08	6"	95750	95761
Ram Pickup 1/2 Ton	02-05	6"	95710	95769
Ram Pickup 1/2 Ton	94-01	0-2"	95710	95719
Ram Pickup 1/2 Ton	94-01	3"	95700	95759
Ram Pickup 1/2 Ton	94-01	5"	95750	95761
Ram Pickup 3/4 Ton	03-08	2-3"	95700	95759
Ram Pickup 3/4 Ton, 1 Ton	03-08	6"	95750	95761
Ram Pickup 3/4 Ton Powerwagon	05-08	4"	95751	95761
Ram Pickup 3/4 Ton	94-02	0-2"	95710	95719
Ram Pickup 3/4 Ton-8,800 GVW	94-02	0-2"	95700	95719
Ram Pickup 3/4 Ton	94-02	4-5"	95750	95761
"W" Pickup 1/2, 3/4 Ton	69-93	5"	95650	95760

## FORD 4WD

Model	Year	Lift	Front Shock	Rear Shock
F-150	04-08	0"	n/a	95650
F-150	04-08	6-8"	n/a	95760
F-150	97-03	6"	95804	95860
Expedition	98-02	6"	95804	95628
F-250, F-350 Super Duty	05-08	0-2"	95710	95660
F-250, F-350 Super Duty	05-08	4"	95700	95760
F-250, F-350 Super Duty	05-08	6"	95750	95760
F-250, F-350 Super Duty	99-04	0-2"	95620	95660
F-250, F-350 Super Duty	99-04	2.5"	95650	95660
F-250, F-350 Super Duty	99-04	4"	95650	95760
F-250, F-350 Super Duty	99-04	6-8"	95660	95760
F-250	87-96	4"	95650	95660
F-350	80-97	4"	95650	95660
Excursion	00-05	0-2"	95620	95662
Excursion	00-05	4"	95650	95762
Excursion	00-05	6"	95650	95762
Excursion	00-05	8-10"	95660	95762

## JEEP 4WD

Model	Year	Lift	Front Shock	Rear Shock
CJ5, CJ7, Scrambler	82-86	4"	95920	95920
Wrangler YJ	87-95	3.5-4.5"	95955	95950
Wrangler YJ	87-95	5-6"	95660*	95920
Wrangler TJ	97-06	3"	95965	95980
Wrangler TJ	97-06	4.5"	95967	95976
Wrangler JK	07-08	0"	95710	95980
Wrangler JK	07-08	2"	95710	95951
Wrangler JK	07-08	3"	95700	95951
Wrangler JK	07-08	4.5"	95700	95959
Wrangler JK	07-08	5-6.5"	95952	95958
Cherokee XJ	84-01	3"	95965	95980
Cherokee XJ	84-01	4.5"	95965	95974
Cherokee XJ	84-01	6.5"	95961*	95920
Comanche MJ	86-92	3"	95965	95920
Grand Cherokee ZJ	93-98	3"	95965	95950
Grand Cherokee ZJ	93-98	4.5"	95965	95920
Grand Cherokee ZJ	93-98	6.5"	95961*	95829
Grand Cherokee WJ	99-04	4"	95978	95971
Grand Cherokee WK	05-06	4"	n/a	95977
Liberty KJ	02-07	2"	n/a	95968

\* Stem eliminator kit #124015 required for installation


\*\* Bar pin eliminator kit #124025 required for installation

## TOYOTA 4WD

Model	Year	Lift	Front Shock	Rear Shock
Tacoma 4WD	95.5-04	2.5"	n/a	95878
Toyota FJ Cruiser	07-08	3"	n/a	95879
Tundra	07-08	0"	n/a	95700

Boots ordered separately

# 5500 Series SHOCK ABSORBERS

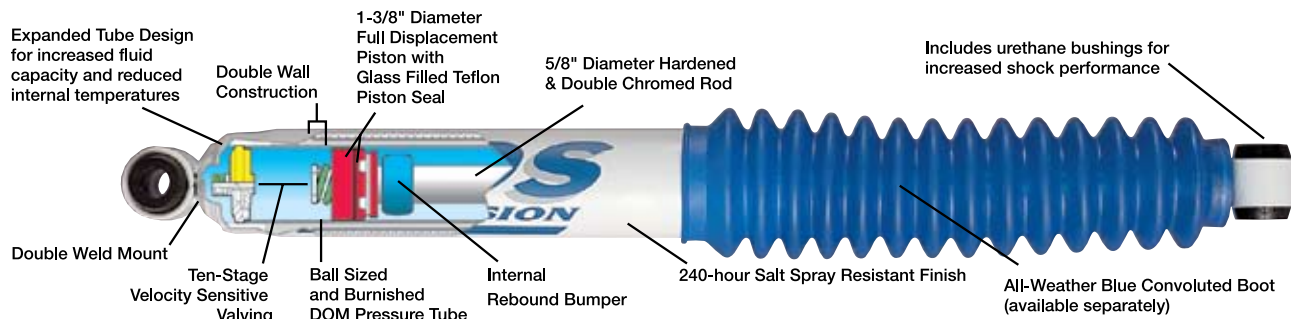

Correct Application Valving Technology is based on extensive shock dyno and ride control research offering the most application specific part numbers available for on and off-road light trucks and SUV's.

This results in:

- Increased stability for improved handling
- Longer front end and tire life
- Less nose dive on severe braking
- Less squat on hard acceleration
- Smoother ride—control without harshness

## CHEVROLET/GMC 4WD

Model	Year	Lift	Front Shock	Rear Shock	Notes
Pickup K1500/C1500	07-08	0"	n/a	55719	
Pickup K1500/C1500	07-08	6"	n/a	55759	
Pickup K1500	99-06	0"	55612	55719	
Pickup K1500 (Non HD)	99-06	6"	55602	55759	
Pickup C1500 (2WD-Non HD)	99-06	6"	55604	55759	
Pickup K2500 HD & Non-HD	01-08	6"	55605	55761	
Pickup C2500 HD (2WD)	01-08	6"	55605	55761	
Hummer H2	03-08	6"	55605	55761	
Pickup K1500-3500	88-98	0-3"	55601	55608	2
Pickup K1500 6 lug	88-98	6"	55600	55609	
Pickup K10, 20, 30	73-87	2.5"	55620	55629	
Pickup K10, 20, 30	73-87	4"	55620	55639	
Pickup K10, 20, 30	73-87	6-8"	55650	55639	
Pickup K10, 20, 30	69-72	4"	55620	55660	
Tahoe, Yukon, Suburban, Avalanche, 1500	07-08	0"	n/a	55719	
Tahoe, Yukon, Suburban, Avalanche, 1500	07-08	6"	n/a	55759	
Tahoe, Yukon, Suburban, Avalanche, 1500	00-06	6"	55602	55759	
Suburban, Avalanche 2500	01-06	6"	55605	55761	
Tahoe, Yukon, Suburban 1500, 2500 6 lug	92-98	0-3"	55601	55608	
Tahoe, Yukon, Suburban 1500, 2500 6 lug	92-98	6"	55600	55609	
Blazer, Jimmy K5, Suburban 10, 20	73-91	2.5"	55620	55629	
Blazer, Jimmy K5, Suburban 10, 20	73-91	4"	55620	55639	
Blazer, Jimmy K5, Suburban 10, 20	73-91	6-8"	55650	55639	
Trailblazer	02-08	2"	n/a	55619	
S-Series Blazer, Pickup, ZR2	83-05	0-3"	55603	55608	
S-Series Blazer, Pickup, ZR2	83-05	5"	55610	55608	1

### Notes

1. With BDS Suspension system

2 These applications are for newer body style K3500 with torsion bar front suspension.

## CHEVROLET/GMC with OE Front Dual Shocks 4WD

Model	Year	Lift	Front Shock	Front Auxiliary	Rear Shock
Pickup K10, 20, 30	81-87	2.5"	55620	55620	55629
Pickup K10, 20, 30	81-87	4"	55620	55650	55639
Pickup K10, 20, 30	81-87	6"	55650	55650	55639
Pickup K10, 20, 30	81-87	8"	55650	55660	55639
Blazer, Jimmy K5, Suburban 10, 20	81-91	2.5"	55620	55620	55629
Blazer, Jimmy K5, Suburban 10, 20	81-91	4"	55620	55650	55639
Blazer, Jimmy K5, Suburban 10, 20	81-91	6"	55650	55650	55639
Blazer, Jimmy K5, Suburban 10, 20	81-91	8"	55650	55660	55639

Note: The front auxiliary is the inner long shock.

Boots ordered separately

## DODGE 4WD

Model	Year	Lift	Front Shock	Rear Shock
Ram Pickup 1/2 Ton	06-08	0"	n/a	55719
Ram Pickup 1/2 Ton	06-08	6"	n/a	55769
Ram Pickup 1/2 Ton - Mega Cab	06-08	2-3"	55700	55759
Ram Pickup 1/2 Ton - Mega Cab	06-08	6"	55750	55761
Ram Pickup 1/2 Ton	02-05	6"	55710	55769
Ram Pickup 1/2 Ton	94-01	0-2"	55710	55719
Ram Pickup 1/2 Ton	94-01	3"	55700	55759
Ram Pickup 1/2 Ton	94-01	5"	55750	55761
Ram Pickup 3/4 Ton	03-08	2-3"	55700	55759
Ram Pickup 3/4 Ton, 1 Ton	03-08	6"	55750	55761
Ram Pickup 3/4 Ton Powerwagon	05-08	4"	55751	55761
Ram Pickup 3/4 Ton	94-02	0-2"	55710	55719
Ram Pickup 3/4 Ton-8,800 GVW	94-02	0-2"	55700	55719
Ram Pickup 3/4 Ton	94-02	4-5"	55750	55761
"W" Pickup 1/2, 3/4 Ton	69-93	5"	55650	55760

## FORD 4WD

Model	Year	Lift	Front Shock	Rear Shock
Ranger	83-97	4"	55800	55829
Ranger	83-97	6"	55820	55829
Bronco II	82-91	4"	55800	55650
Bronco II	82-91	6"	55820	55829
Expedition	98-02	6"	55804	55628
F-150	04-08	0"	n/a	55650
F-150	04-08	6"	n/a	55760
F-150	97-03	0-1"	55805	55850
F-150	97-03	6"	55804	55860
F-150 - 4WD	80-96	0-1"	55805	55620
F-150 - 4WD	80-96	1-2"	55810	55620
F-150 - 4WD	80-96	4"	55800	55660
F-150 - 4WD	80-96	6"	55820	55660
F-150 - 2WD	80-96	1-2"	55810	55620
F-150 - 2WD	80-96	4"	55800	55650
F-150 - 2WD	80-96	6"	55820	55650
F-150	77-79	4"	55820	55850
F-150	77-79	6"	55850	55860
F-150	73-76	4"	55875	55850
F-150	73-76	6"	55877	55860
Bronco	80-96	0-1"	55805	55620
Bronco	80-96	1-2"	55810	55620
Bronco	80-96	4"	55800	55650
Bronco	80-96	6"	55820	55650
Bronco	78-79	4"	55850/55820**	55650
Bronco	78-79	6"	55860/55850**	55650
F-250, F-350 Super Duty	05-08	0-2"	55710	55660
F-250, F-350 Super Duty	05-08	4"	55700	55760
F-250, F-350 Super Duty	05-08	6"	55750	55760
F-250, F-350 Super Duty	05-08	8"	55751	55765
F-250, F-350 Super Duty	99-04	0-2"	55620	55660
F-250, F-350 Super Duty	99-04	2.5"	55650	55660
F-250, F-350 Super Duty	99-04	4"	55650	55760
F-250, F-350 Super Duty	99-04	6"	55660	55760
F-250, F-350 Super Duty	99-04	8"	55660	55765
F-250	87-96	4"	55650	55660
F-250	80-86	4"	55820	55660
F-350	80-97	4"	55650	55660
Excursion	00-05	0-2"	55620	55662
Excursion	00-05	4"	55650	55762
Excursion	00-05	6"	55650	55762
Excursion	00-05	8"	55660	55762
Excursion	00-05	10"	55660	55766

\*\* Order one each front shock w/ staggered mounts.

## FORD with OE Front Dual Shocks 4WD

Model	Year	Lift	Front Shock	Front Auxiliary	Rear Shock
F-150, Bronco	80-96	0-1"	55805	55810	55620
F-150, Bronco	80-96	1-2"	55810	55800	55620
F-150	80-96	4"	55800	55820	55660
F-150	80-96	6"	55820	55819	55660
F-150	78-79	4"	55820	55819	55850
F-150	78-79	6"	55850	55860	55860
Bronco	80-96	4"	55800	55820	55650
Bronco	80-96	6"	55820	55819	55650

Note: Front auxiliary is the shock forward of the front axle.

Boots ordered separately

# 5500 Series SHOCK ABSORBERS

## JEEP 4WD

Model	Year	Lift	Front Shock	Rear Shock
CJ5, CJ6, M38A1	53-75	2.5"	55900	55900
CJ5, CJ7, Scrambler	76-86	2.5"	55900	55950
CJ5, CJ7, Scrambler	82-86	4"	55920	55920
CJ5, CJ7, Scrambler	76-81	4"	55900	55920
J10, J20 Pioneer 4WD	74-86	4"	55875	55920
Wagoneer 4WD Full Size	74-89	4"	55875	55920
Wrangler YJ	87-95	2"	55945	55900
Wrangler YJ	87-95	3.5-4.5"	55955	55950
Wrangler YJ	87-95	5-6"	55660*	55920
Wrangler TJ	97-06	0-1"	55960	55969
Wrangler TJ	97-06	2"	55979	55975
Wrangler TJ	97-06	3"	55965	55980
Wrangler TJ	97-06	4.5"	55967	55976
Wrangler JK	07-08	0"	55710	55980
Wrangler JK	07-08	2"	55710	55951
Wrangler JK	07-08	3"	55700	55951
Wrangler JK	07-08	4.5"	55700	55959
Wrangler JK	07-08	5-6.5"	55952	55958
Cherokee XJ	84-01	0-2"	55979	55972
Cherokee XJ	84-01	3"	55965	55980
Cherokee XJ	84-01	4.5"	55965	55974
Cherokee XJ	84-01	6.5"	55961*	55920
Comanche MJ	86-92	2"	55979	55920
Comanche MJ	86-92	3"	55965	55920
Grand Cherokee ZJ	93-98	0-1"	55979	55900
Grand Cherokee ZJ	93-98	1.75-2"	55979	55950
Grand Cherokee ZJ	93-98	3"	55965	55950
Grand Cherokee ZJ	93-98	4.5"	55965	55920
Grand Cherokee ZJ	93-98	6.5"	55961*	55829
Grand Cherokee WJ	99-04	2"	55979	55970
Grand Cherokee WJ	99-04	4"	55978	55971
Grand Cherokee WK	05-07	4"	n/a	55977
Liberty KJ	02-07	2"	n/a	55968

\* Stem eliminator kit #124015 required for installation

\*\* Bar pin eliminator kit #124025 required for installation

## SUZUKI & TOYOTA 4WD

Model	Year	Lift	Front Shock	Rear Shock
Suzuki Samurai	85-95	4"	55800	55950
Toyota Tacoma 4WD	95.5-04	2.5"	n/a	55878
Toyota T-100	93-98	4"	55930	55939
Toyota Pickup	86-95	4"	55930	55939
Toyota 4-Runner	86-89	4"	55930	55939
Toyota FJ Cruiser	07-08	3"	n/a	55879
Toyota Tundra	2007	0"	n/a	55700

**Boots ordered separately**



### 5500 SERIES SHOCK BOOT

#### SHOCK BOOTS — 1-3/4"

Color	Retail (1/pkg)	Bulk
Red	098270	098275
Blue	098500	098505
Black	098520	098525

#### SHOCK BOOTS — 2-3/8"

Color	Retail (1/pkg)	Bulk
Red	099270	099275
Blue	099500	099505
Yellow	099510	099515
Black	099520	099525

*Note: All packaged boots include shock ties*